


# PHILIPS

## LuxSpace Accent Mini, Compact

RS730B, RS731B  
RS740B, RS741B

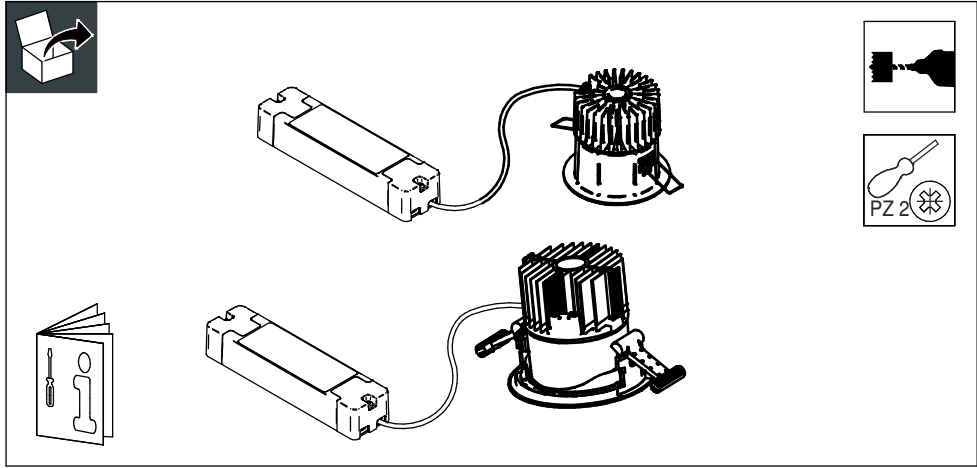


220 V  
240 V

50 Hz  
60 Hz









GLOW WIRE  
650 °C





Model	Lumen package	Color Temperature [K]	kg
RS730/RS731	LED12S	827/830/840/930	0,54
	LED17S	827/830/840/930/PW930/CRW/CH	0,76
	LED19S	FMT/ROSE	0,76
RS740/RS741	LED20S	827/830/840/930/PW930	0,76
	LED27S	827/830/840/930/PW930/ROSE/FR/CRW/FMT	0,76
	LED39S	827/830/840/930/FR/PW930/PC930	0,76
	LED49S	827/830/840/930/FR/PW930/PC930	0,76

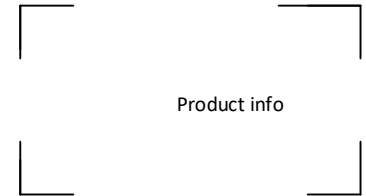

Product info

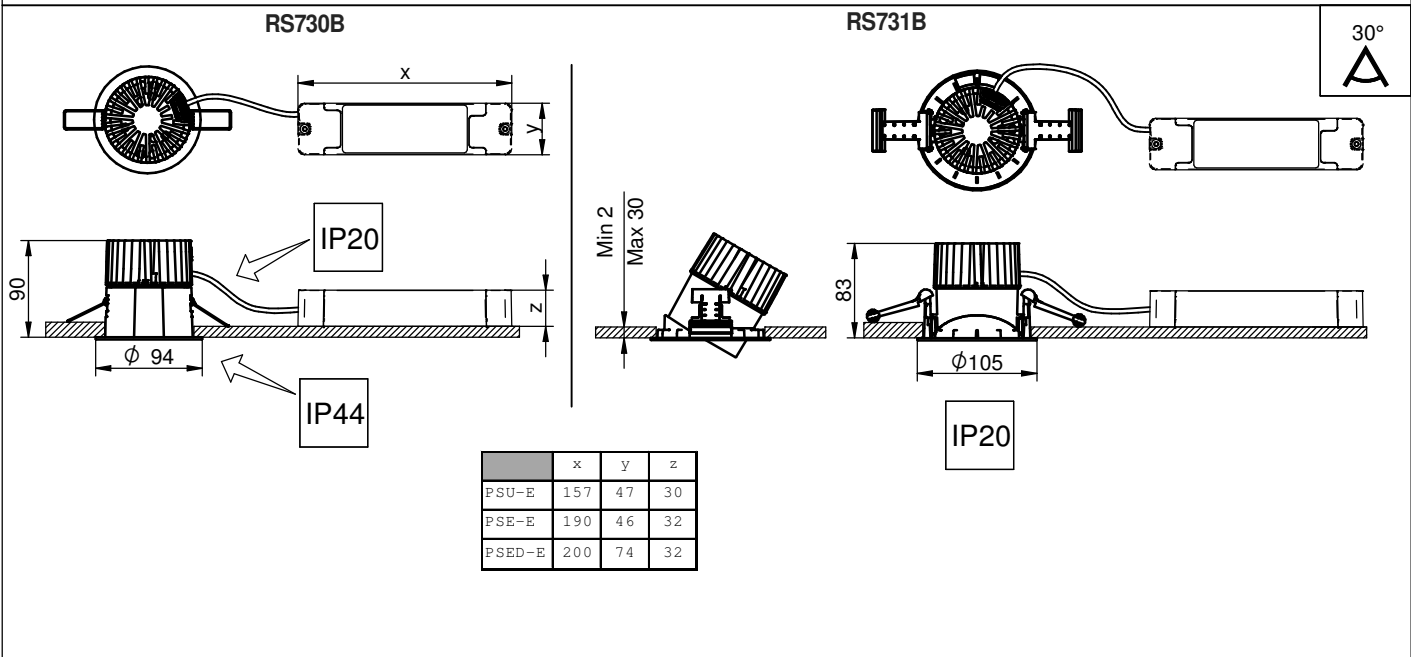

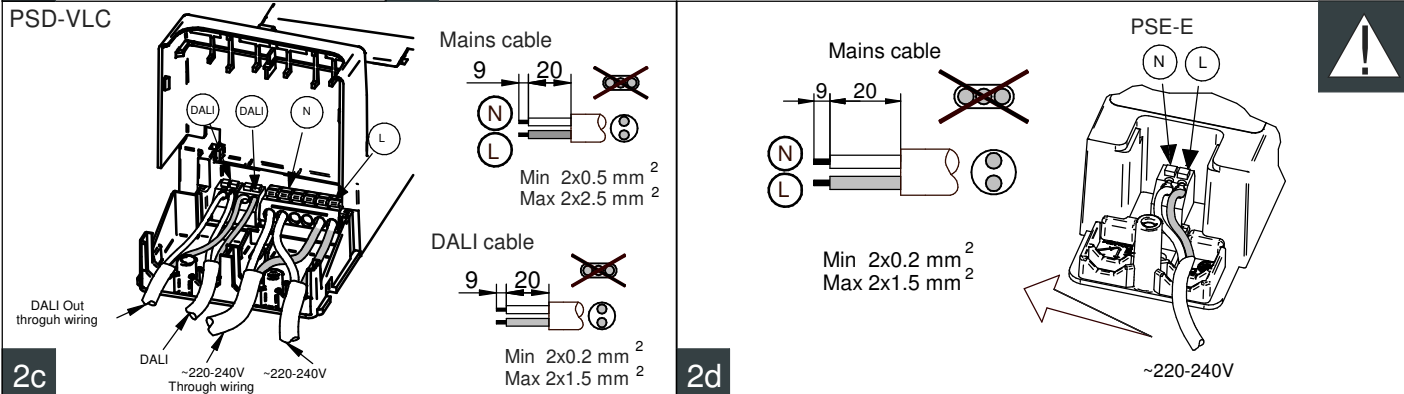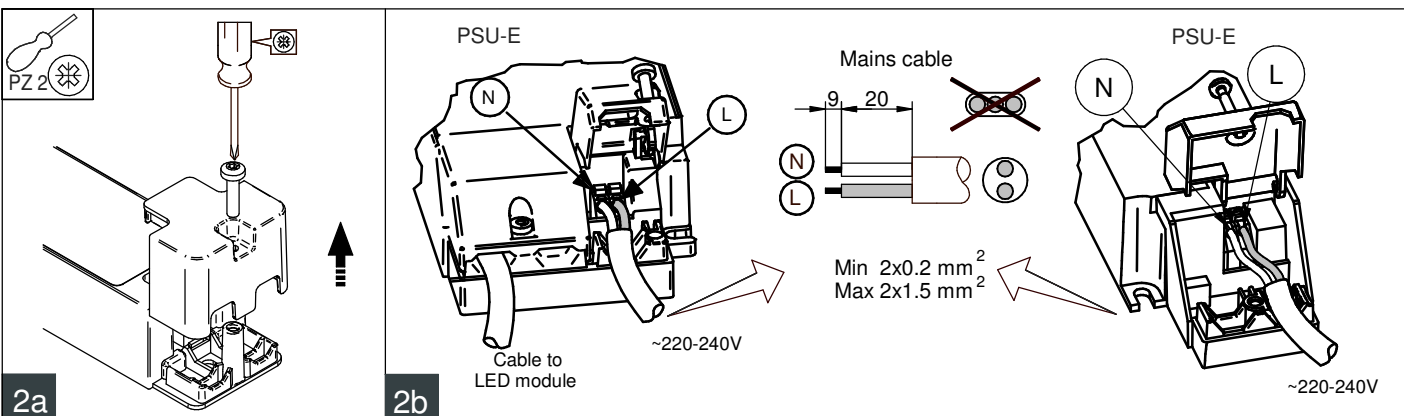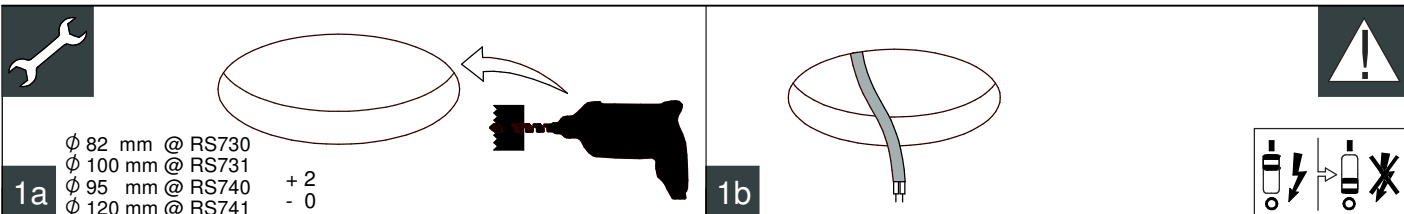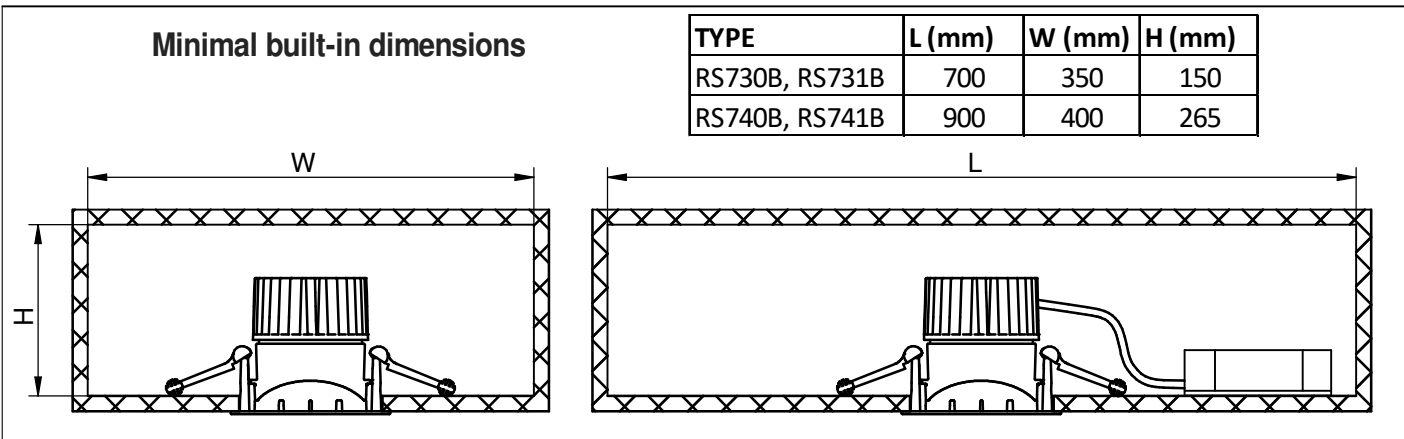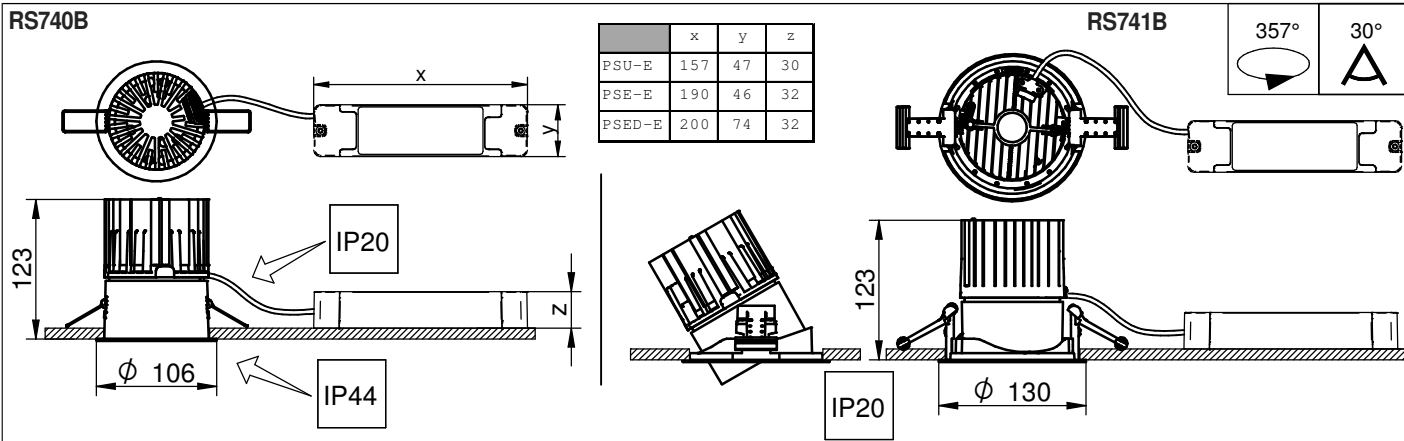


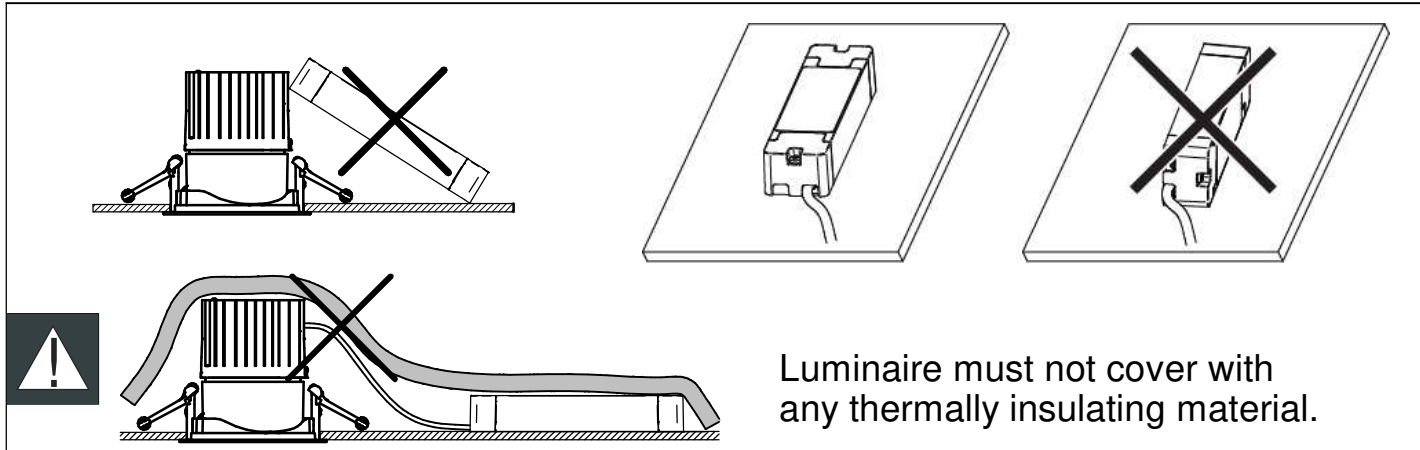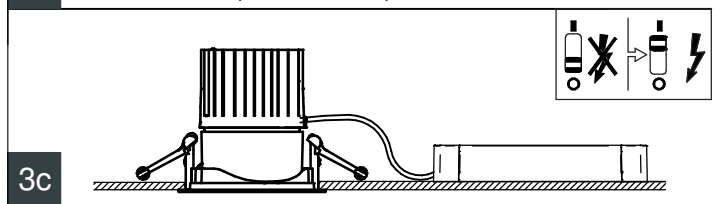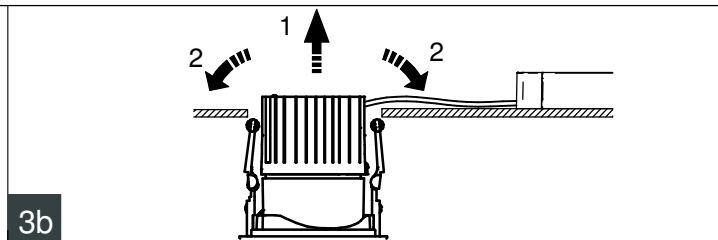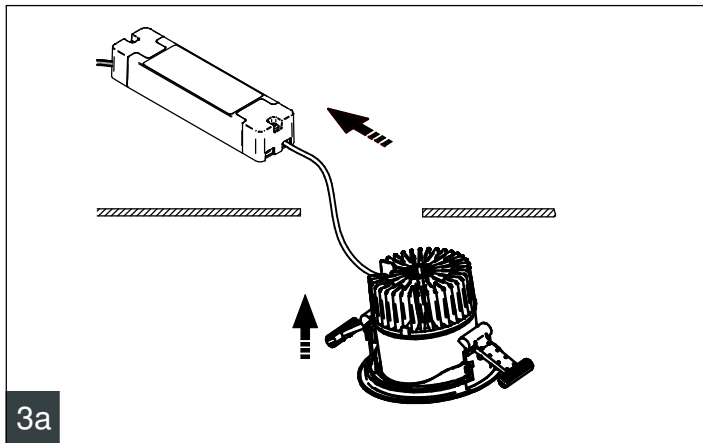



Luminaire must not cover with any thermally insulating material.

Xitanium 36W WH 0.3-1.05A 54V Is (PSE-E)		Xitanium 36W WH 0.3-1A 54V TD/Is CL (PSD-VLC)		XITANIUM 50W WH 0.7-1.5A 54V IS (PSE-E)		Xitanium 50W WH 0.7-1.5A 54V TD/Is CL 230V (PSD-VLC)	
<b>I<sub>max</sub> (A)</b>	16	<b>I<sub>max</sub> (A)</b>	20,4	<b>I<sub>max</sub> (A)</b>	23,5	<b>I<sub>max</sub> (A)</b>	24,9
<b>T<sub>ref</sub> (ms)</b>	0,216	<b>T<sub>ref</sub> (ms)</b>	0,195	<b>T<sub>ref</sub> (ms)</b>	0,272	<b>T<sub>ref</sub> (ms)</b>	0,186
<b>MCB</b>	<b>Max. Products (pcs)*</b>	<b>MCB</b>	<b>Max. Products (pcs)*</b>	<b>MCB</b>	<b>Max. Products (pcs)*</b>	<b>MCB</b>	<b>Max. Products (pcs)*</b>
B-10A	22	B-10A	15	B-10A	15	B-10A	17
B-16A	36	B-16A	24	B-16A	24	B-16A	27
C-10A	37	C-10A	24	C-10A	24	C-10A	28
C-16A	61	C-16A	40	C-16A	40	C-16A	45

Xitanium 20W WH 0.15-0.5A 54V Is (PSE-E)		Xitanium 20W WH 0.15-0.5A 54V TD/Is CL (PSD-VLC)		Xitanium 36W/m 0.3-1.05A 54V 230V (PSU-E)		Xitanium 36W/m 0.3-1.05A 54V 230V (PSU-E)	
<b>I<sub>max</sub> (A)</b>	15,8	<b>I<sub>max</sub> (A)</b>	5,3	<b>I<sub>max</sub> (A)</b>	18	<b>I<sub>max</sub> (A)</b>	18
<b>T<sub>ref</sub> (ms)</b>	0,224	<b>T<sub>ref</sub> (ms)</b>	0,7	<b>T<sub>ref</sub> (ms)</b>	0,25	<b>T<sub>ref</sub> (ms)</b>	0,25
<b>MCB</b>	<b>Max. Products (pcs)*</b>	<b>MCB</b>	<b>Max. Products (pcs)*</b>	<b>MCB</b>	<b>Max. Products (pcs)*</b>	<b>MCB</b>	<b>Max. Products (pcs)*</b>
B-10A	22	B-10A	15	B-10A	21	B-10A	21
B-16A	36	B-16A	24	B-16A	34	B-16A	34
C-10A	37	C-10A	24	C-10A	35	C-10A	35
C-16A	61	C-16A	40	C-16A	57	C-16A	57

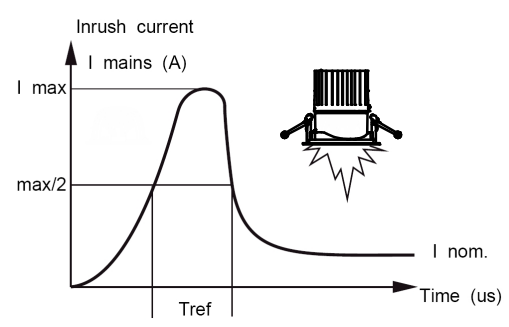


# Reflector and fixed housing accessory changing instructions

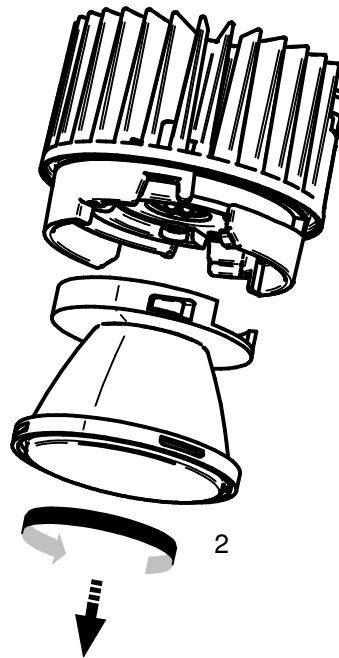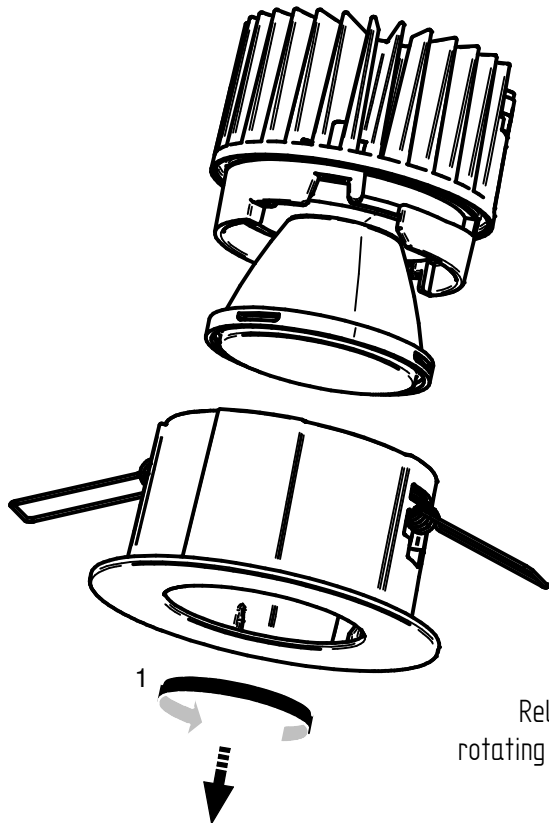

Release the parts by rotating them counter clockwise

4a


4b

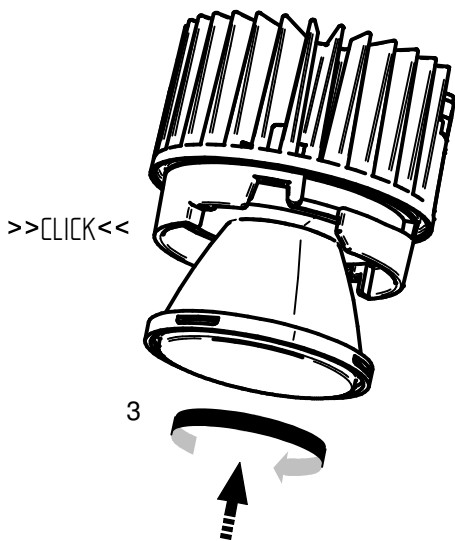

Insert the new reflector and turn clockwise



Only with soft clothes!  
Do not push hard!

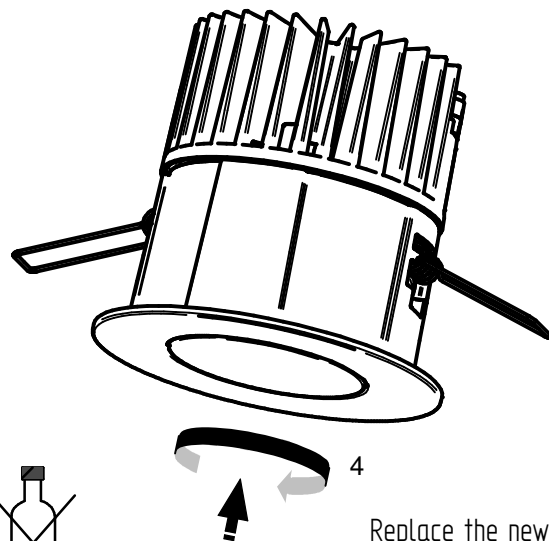

Replace the new housing and turn clockwise

4a

4b

© 2018 Signify Holding.  
All rights reserved. This document contains information relating to the product portfolio of Signify which information may be subject to change. No representation or warranty as to the accuracy or completeness of the information included herein is given and any liability for any action in reliance thereon is disclaimed. The information presented in this document is not intended as any commercial offer and does not form part of any quotation or contract. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.. All other trademarks are owned by Signify Holding or their respective owners.

Signify Holding.  
The Netherlands